


**EPSON**<sup>®</sup>  
EXCEED YOUR VISION

## Multimedia Projector


EB-992F  
EB-982W  
EB-972  
EB-118  
EB-W49  
EB-X49  
EB-E20  
**EB-FH52**  
EB-W52

EB-W51  
EB-X51  
EB-E10  
EB-FH06  
EB-W06  
EB-X06  
EB-E01  
EB-X500  
EB-E500



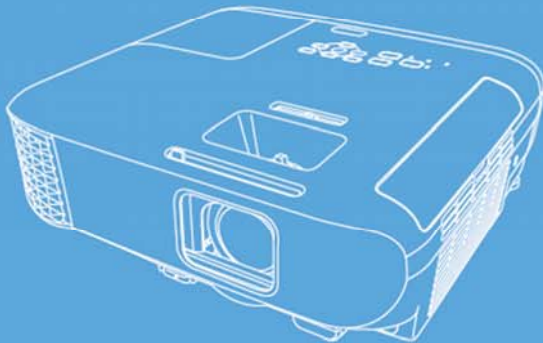


EN	Quick Start Guide	LV	Ātrās darba uzsākšanas pamācība
DE	Kurzanleitung	EL	Οδηγός γρήγορης εκκίνησης
FR	Guide de démarrage rapide	TR	Hızlı Başlangıç Kılavuzu
IT	Guida di avvio rapido	SL	Priročnik za hitri zagon
ES	Guía de inicio rápido	HR	Kratke upute
PT	Guia de Referência Rápida	MK	Прирачник брз почеток
NL	Introductiehandleiding	SR	Uputstvo za brz početak
DA	Introduktion	CA	Guia d'inici ràpid
FI	Pika-aloitusopas	RU	Руководство по быстрой установке
NO	Hurtigveiledning	UK	Коротка інструкція "Початок роботи"
SV	Snabbstartsguide	KK	Қысқа іске қосу нұсқаулығы
CS	Úvodní příručka	KO	빠른 시작 가이드
HU	Bevezetés	ID	Panduan Ringkas
PL	Przewodnik szybkiego startu	AR	دليل البداية السريعة
SK	Stručná príručka	FA	راهنمای سریع برای شروع بکار
BG	Ръководство за бърз старт	ZHS	設定手册
RO	Ghid de pornire rapidă	ZHT	設定説明書
ET	Lühijuhend		
LT	Trumpas pradžios vadovas		

1

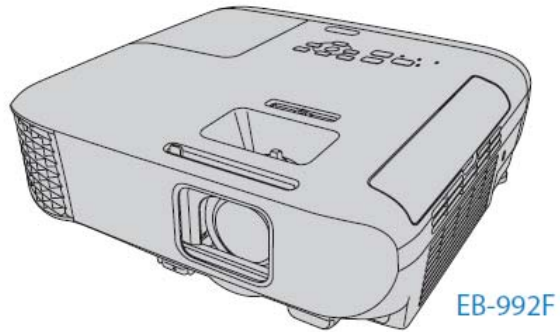

EB-992F

 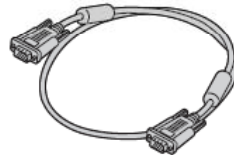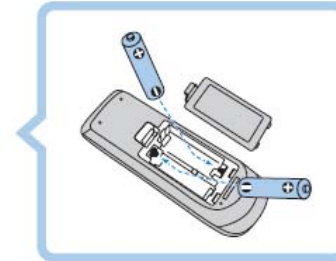






EB-992F/EB-982W/EB-972/  
EB-118/EB-W49/EB-X49/  
EB-E20/EB-FH52/EB-W52/  
EB-W51/EB-X51/EB-FH06/  
EB-W06/EB-X06/EB-X500  
only

EB-982W/EB-972/EB-118/  
EB-W49/EB-X49/EB-W51/  
EB-X51/EB-FH06/EB-W06/  
EB-X06/EB-X500  
only


EPSON		Multimedia Projector	
EB-992F	EB-W51	EB-972	EB-982W
EB-982W	EB-972	EB-118	EB-118
EB-972	EB-470	EB-118	EB-118
EB-118	EB-9106	EB-118	EB-118
EB-W49	EB-W03	EB-118	EB-118
EB-W51	EB-906	EB-118	EB-118
EB-X50	EB-401	EB-118	EB-118
EB-FH52	EB-1500	EB-118	EB-118
EB-W06	EB-1500	EB-118	EB-118

The following items are not included with all projector models.

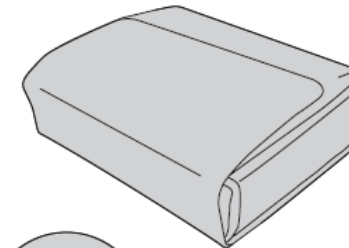


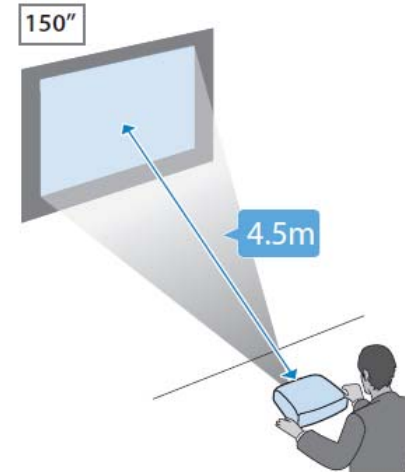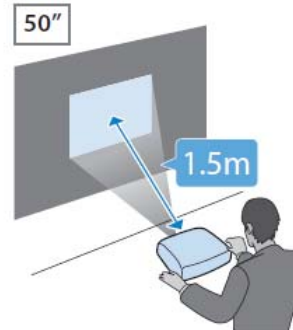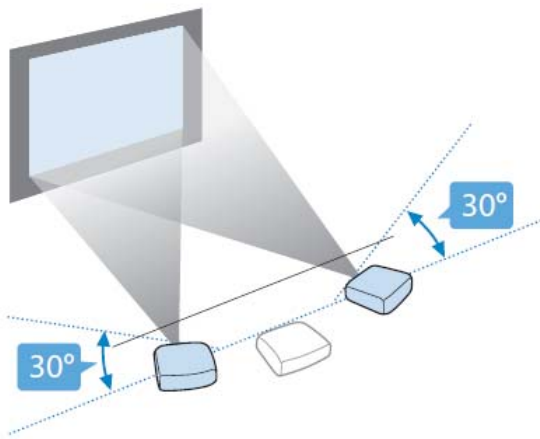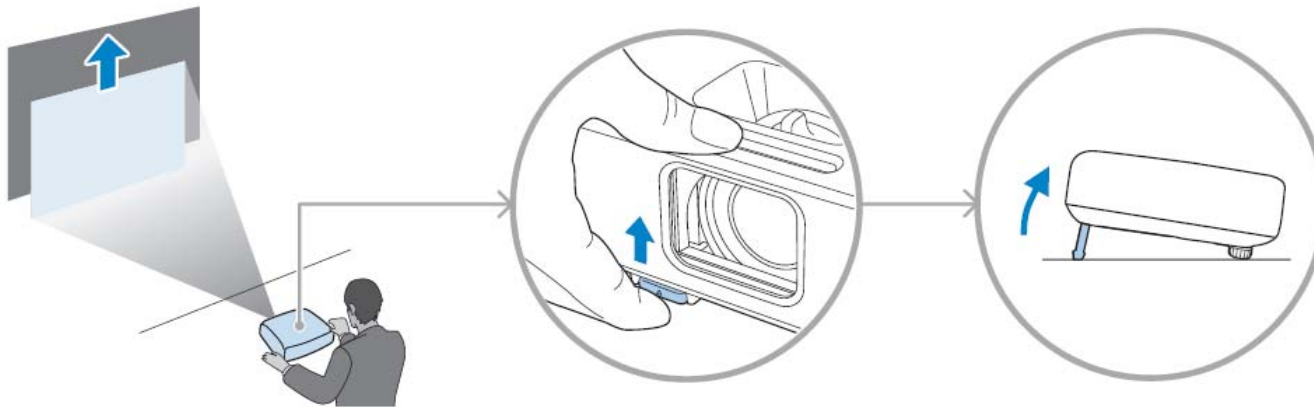


3

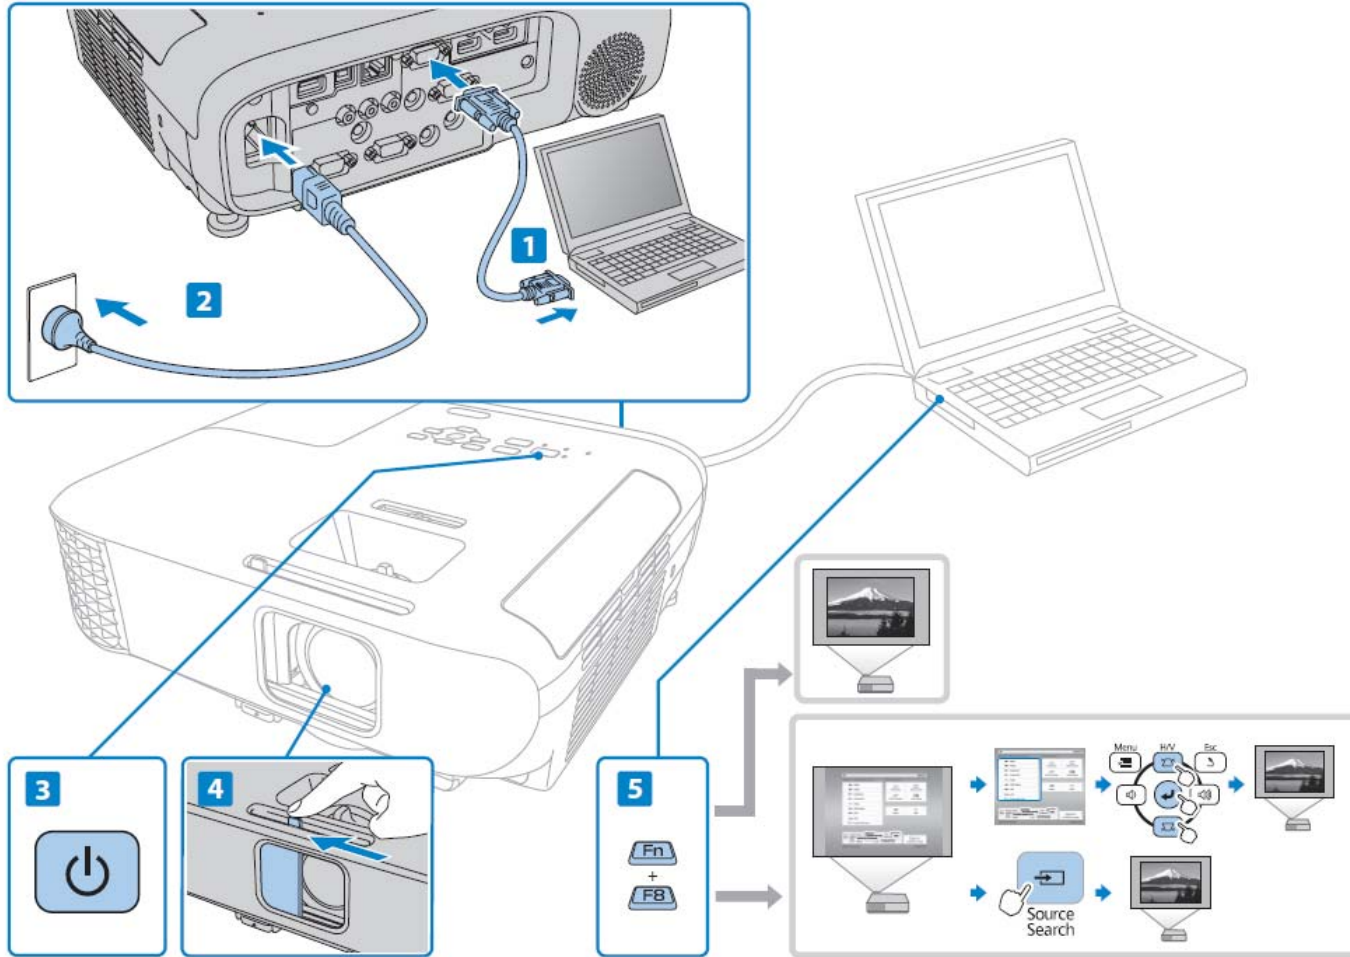


EB-992F/EB-982W/EB-972/EB-118/EB-W49/EB-X49/  
EB-FH52/EB-W52/EB-W51/EB-X51/EB-FH06/EB-W06/  
EB-X06/EB-X500

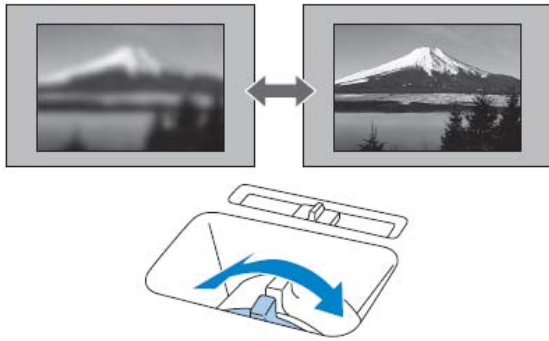


EB-E20/EB-E10/EB-E01/EB-E500

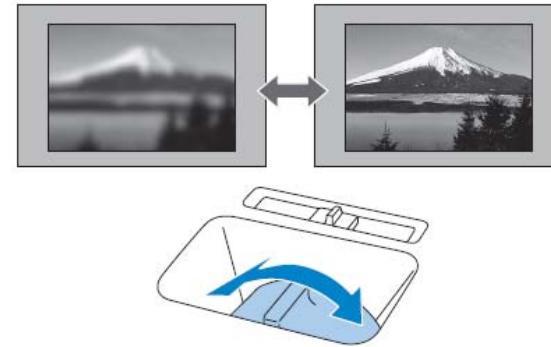



EB-992F/EB-982W/EB-972/EB-118/EB-W49/EB-X49/  
EB-FH52/EB-W52/EB-W51/EB-X51/EB-FH06/EB-W06/  
EB-X06/EB-X500

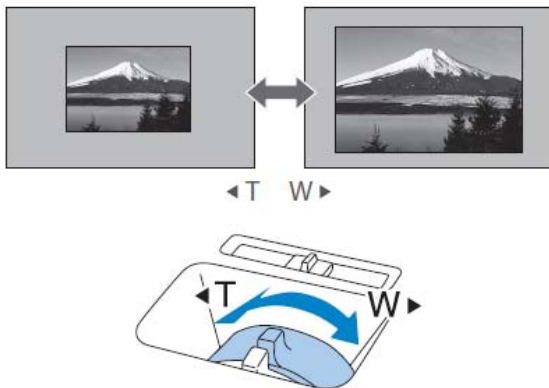

EB-E20/EB-E10/EB-E01/EB-E500

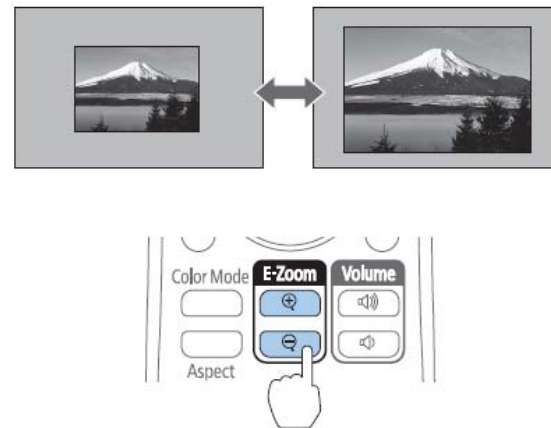




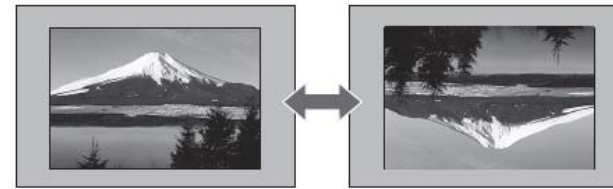
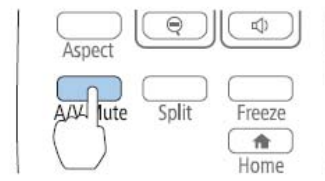


5



EB-992F/EB-982W/EB-972/EB-118/EB-W49/EB-X49/EB-E2/EB-FH52/  
EB-W52/EB-W51/EB-X51/EB-FH06/EB-W06/EB-X06/EB-X500  
only

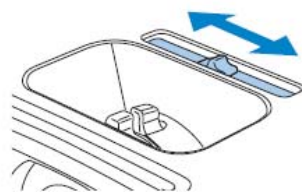

1

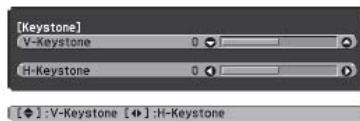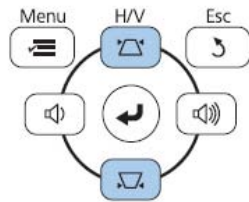

2

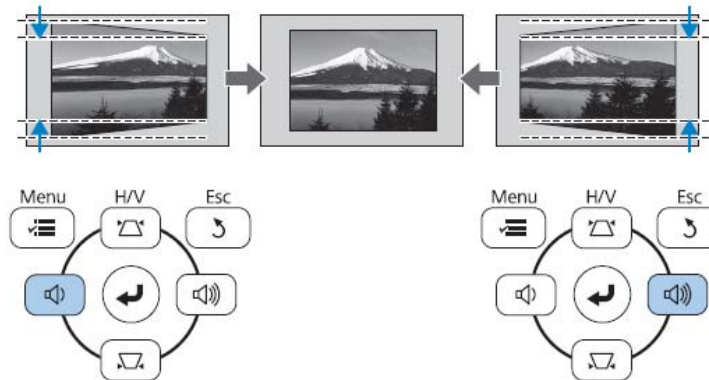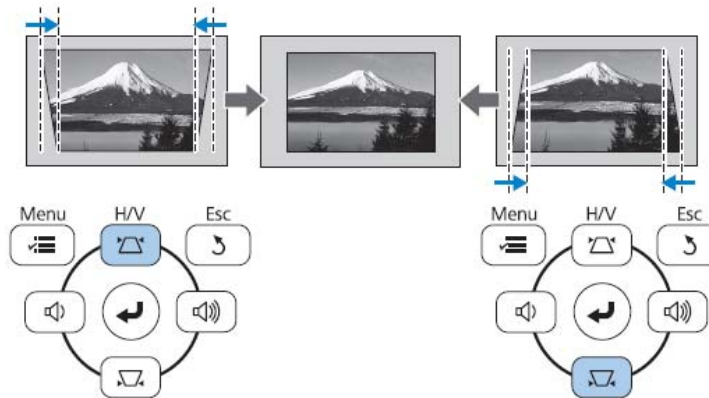

7

